

How to Digitize Media using ClearClick

1. Plug ClearClick in to an available outlet.
2. Turn on the ClearClick device and attach the RCA cables or an S Video cord to your camcorder or VCR. **(Fig. 1)**
3. Make sure your camcorder or VCR is plugged in. Put in the tape or disc you would like to digitize.
4. Put a USB or an SD card in the ClearClick device to store your completed digitized recording. **(Fig. 2)**
5. Push Play on your camcorder and push Record on the ClearClick device. **(Fig. 3)**
6. Your video will record to your USB or SD Card.
7. When you are finished, remove your storage device.



Figure 1



Figure 2



Figure 3